 
Genius

Quick Setup Guide



Available on Apple & Android





Genius Hub helps you reduce your property's energy consumption by only heating the parts of the building that are being used. By controlling the heating in each individual room and learning the best schedule automatically, it helps save money and energy whilst keeping the building occupants comfortable



🔒 🕞 My House 📄				
Zones		1	25.4° •••	
() Hot Water		() Living Room		
set: OFF		25.5° set: 16.0°		
() Kitchen		() Bedro	om	
25.4° set: 4.0°		25.6° set: 4.0°		
🕔 Bedside Lam	р			
set: OFF				




How to register

To secure your system and to choose a memorable username and password, you need to register your system. To register the system:

- On the Welcome Page, click on 'Create Account'
- On the new page, fill in the requested details:
- Enter the username you would like to use with the system and the password to secure your system
- Enter your contact details
- Select the location of your system

NOTE: These fields are case sensitive, so be careful when entering your login details especially on a mobile device where it may auto-capitalise your typing.

Login					
Username					
L Use	name				
Password					
Pass	word				
	Log in				
Create accou	nt Demo	Forgotten Details			

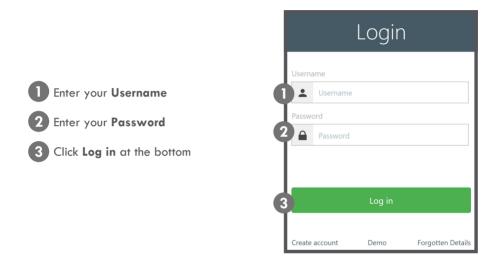





On a mobile device (such as a smart phone, iPad or tablet), you can download the Genius Hub app from the Apple App store or Android Play store. To access Genius Hub via browser, enter www.geniushub.co.uk/app

Timer Mode

θG	Livin	Living Room		
24.5° (se		» (°		D 1
Weekly Sch	nedule		lŶ	
Monday				
16.0°	21.0°	16.0°	21.0°	16.0" 3
Tuesday		•		
16.0°	21.0°	16.0°	21.0°	16.0°
Wednesday				
16.0°	21.0°	16.0°	21.0°	16.0°
Thursday				
16.0°	21.0°	16.0°	21.0°	16.0°
Friday				
16.0°	21.0°	16.0°	21.0°	16.0°
Saturday				
16.0°	21.0°	16.0°	21.0	9° 16.0
Sunday				
16.0°	21.0*	16.0°	21.0	^{9*} 16.0

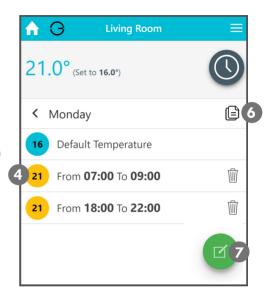


For further info, please see our How to get help (Page 13)

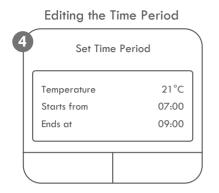





- Click on Timer Mode 🕔
- 3 The room will now follow the heating schedule set up for that room. You can edit by clicking on the day
- Select a time period
 - Select a temperature and a start/end time period
- 6 A schedule can be copied to multiple days
 - Additional periods can be added




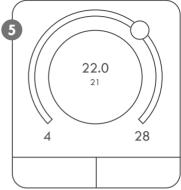

Set Time Period

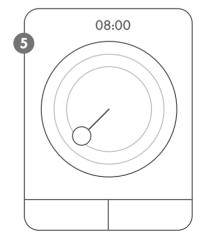


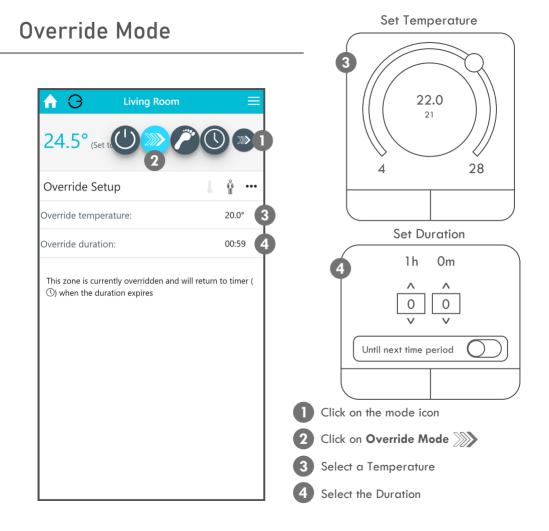


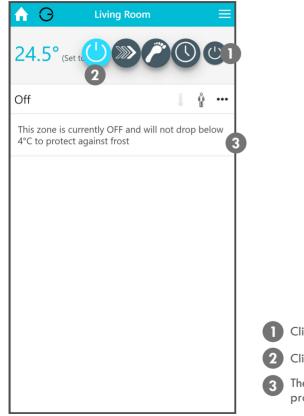



 
This section lets you check each device's battery level and last communication time. (Main Menu > Settings > Devices Page)

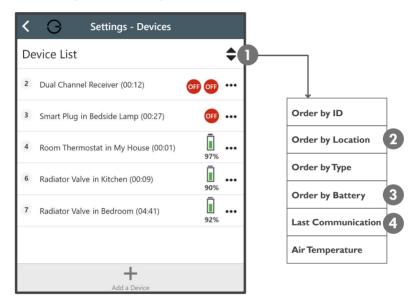



Last Communication: To check which devices have stopped communicating

Manual Override - Radiator Valve

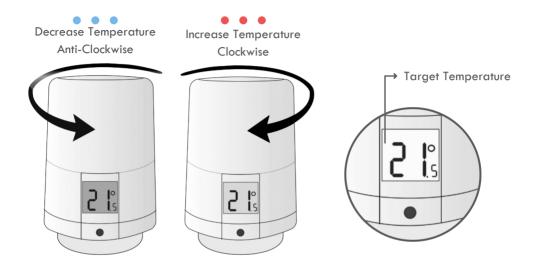


Your radiator will maintain the room temperature you have set on the valve. Once the room reaches the temperature, the radiator will switch off. If there are multiple Radiator Valves in the same room, only one device in the room should be overridden


The radiator will turn back on automatically if the room drops below the room target temperature. The room will return to the previous mode once the override expires

NOTE: In the first 3 weeks the valve is learning how to heat the room efficiently. If you turn the dial manually it will not learn on this occasion and it will heat the room faster


Manual Override - Room Thermostats

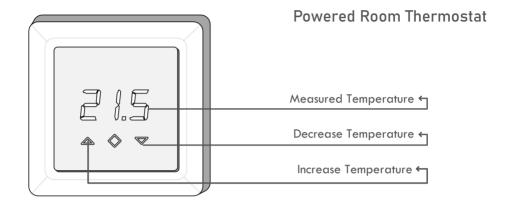

Wireless Room Thermostat

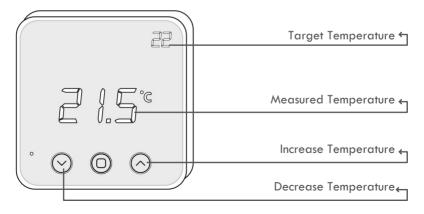

Manual Override - Electric Switch

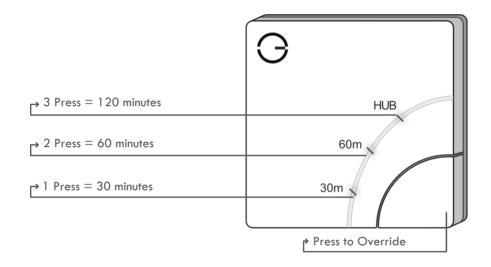

When the Electric Switch is controlled by the app - only one light will appear next to the HUB light

How to get help

- Full User Guide: www.geniushub.co.uk/user-guide
- Full Installation Guide:
 www.geniushub.co.uk/install-guide
- Genius Hub Support Knowledge Base: www.geniushub.co.uk/knowledge-base
- Technical Documentation: www.geniushub.co.uk/wiring
- One-2-One Support: www.geniushub.co.uk/shop/support-one2one
- Raise a Ticket:
 www.geniushub.co.uk/shop/support-ticket
- Service Status: www.geniushub.co.uk/service-status



Smart made simple.

