



Powered Room Thermostat

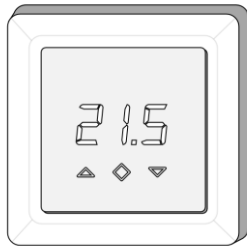


Internal Wiring Diagram

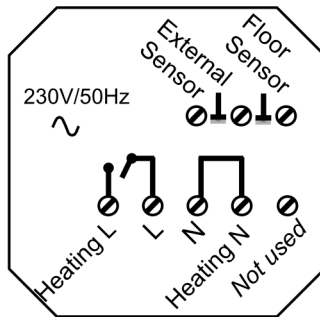

NOTE The Powered Room Thermostat is mains powered and requires either a separate 3A fused spur or connection directly into the boiler if the boiler is powered from a 3A fused spur.

Powered Room Thermostat

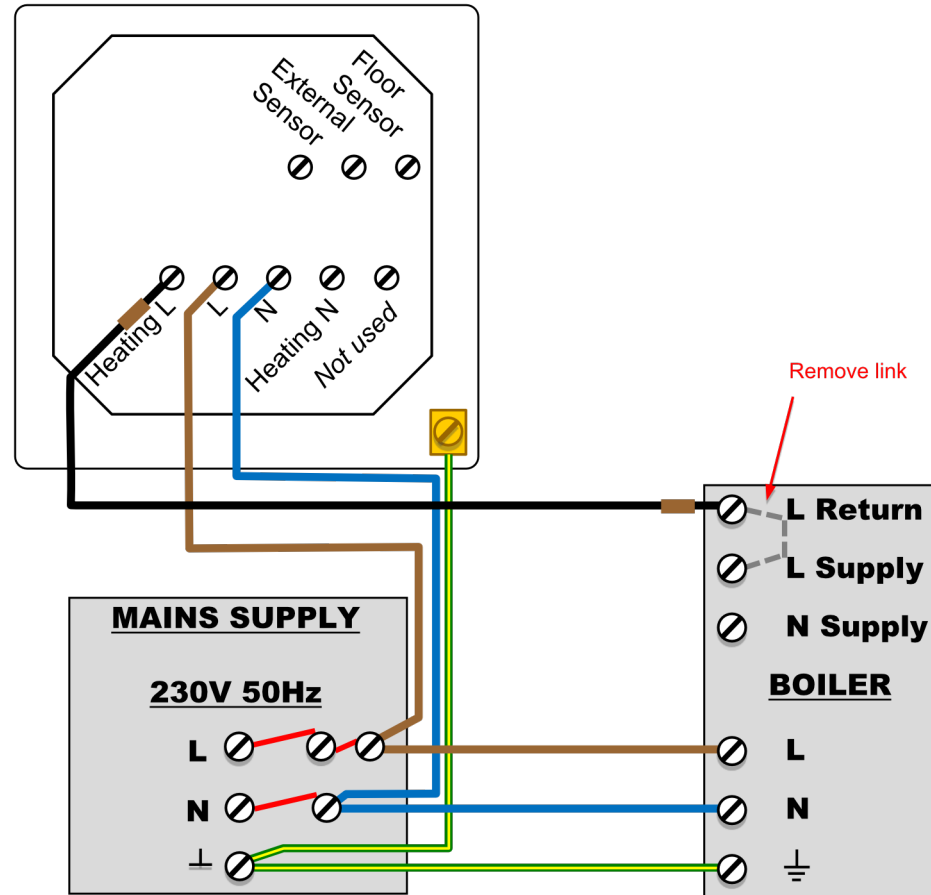

TIP: Take a photo of the existing wiring before you start to help you remember.
For more wiring diagrams see: www.geniushub.co.uk/wiring

