



**NOTE** The Powered Room Thermostat is mains powered and requires either a separate 3A fused spur or connection directly into the boiler if the boiler is powered from a 3A fused spur.

**TIP:** Take a photo of the existing wiring before you start to help you remember. For more wiring diagrams see: [www.geniushub.co.uk/wiring](http://www.geniushub.co.uk/wiring)