

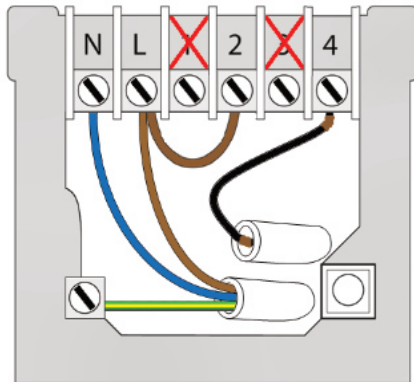
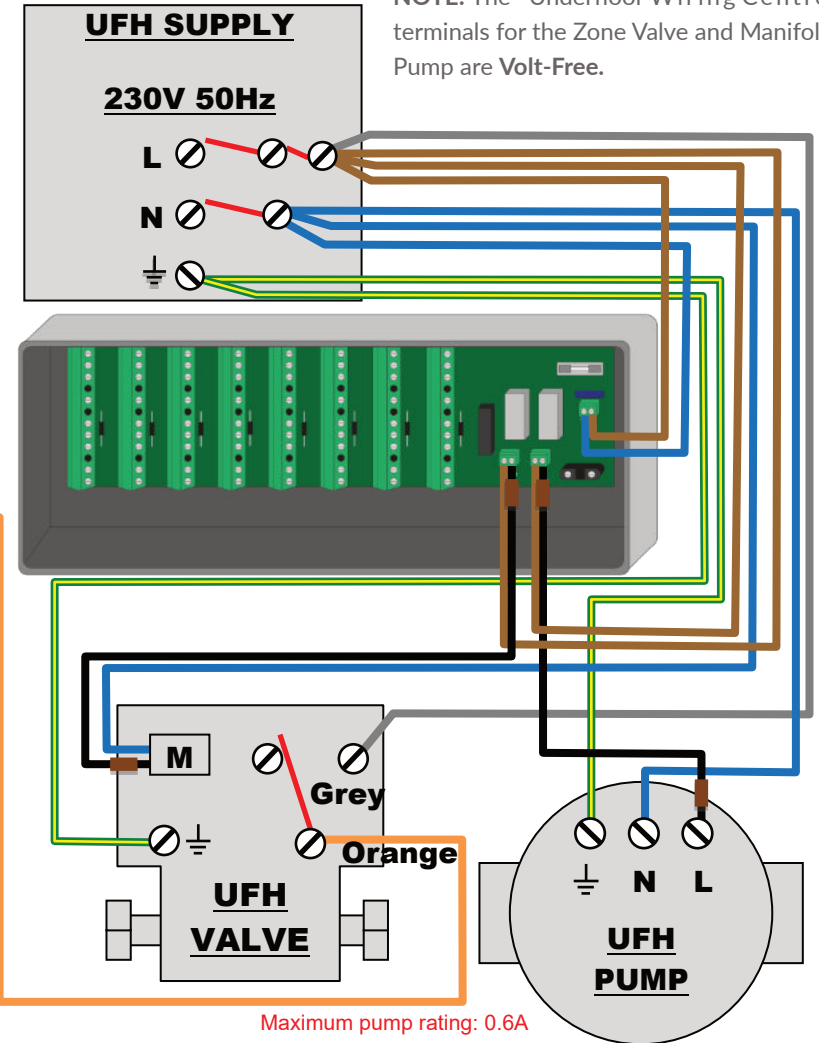


Single Channel Receiver

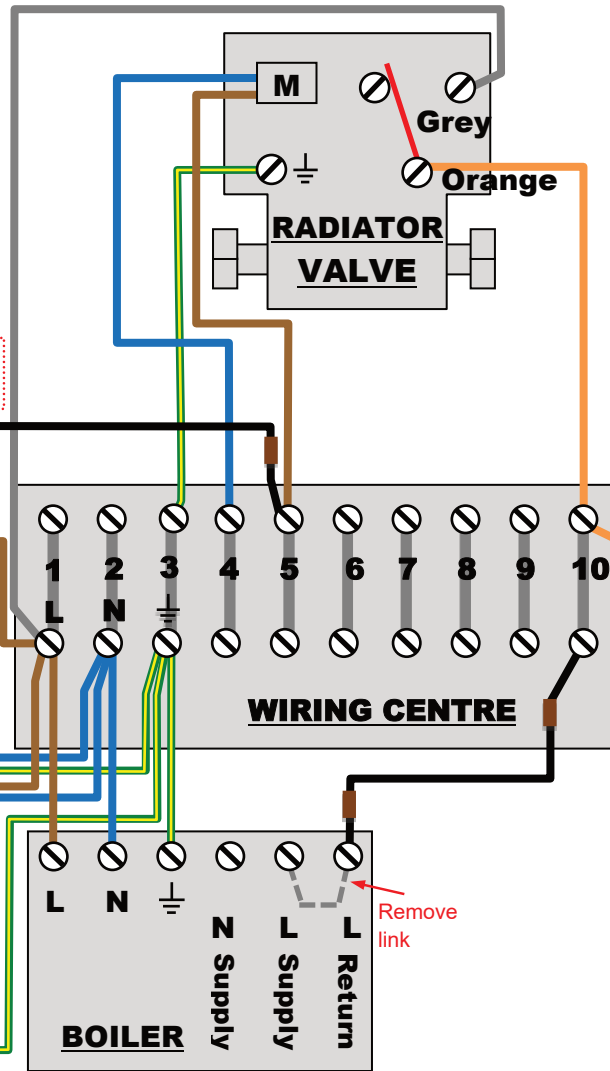

2: Common
4: Radiator ON

NOTE: The Receiver Units are mains powered and require either a separate 3A fused spur or connection directly into the boiler if the boiler is powered from a 3A fused spur.

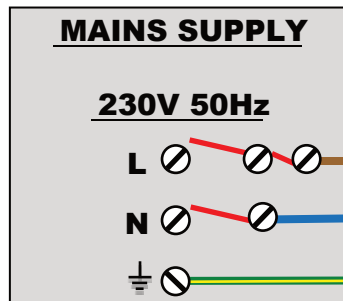

NOTE: The Underfloor Wiring Centre terminals for the Zone Valve and Manifold Pump are Volt-Free.


Maximum pump rating: 0.6A

TIP Take a photo of the existing wiring before you start to help you remember.

For more wiring diagrams see:
www.geniushub.co.uk/wiring



NOTE: The underfloor heating manifold must be capable of circulating water with all actuators closed.




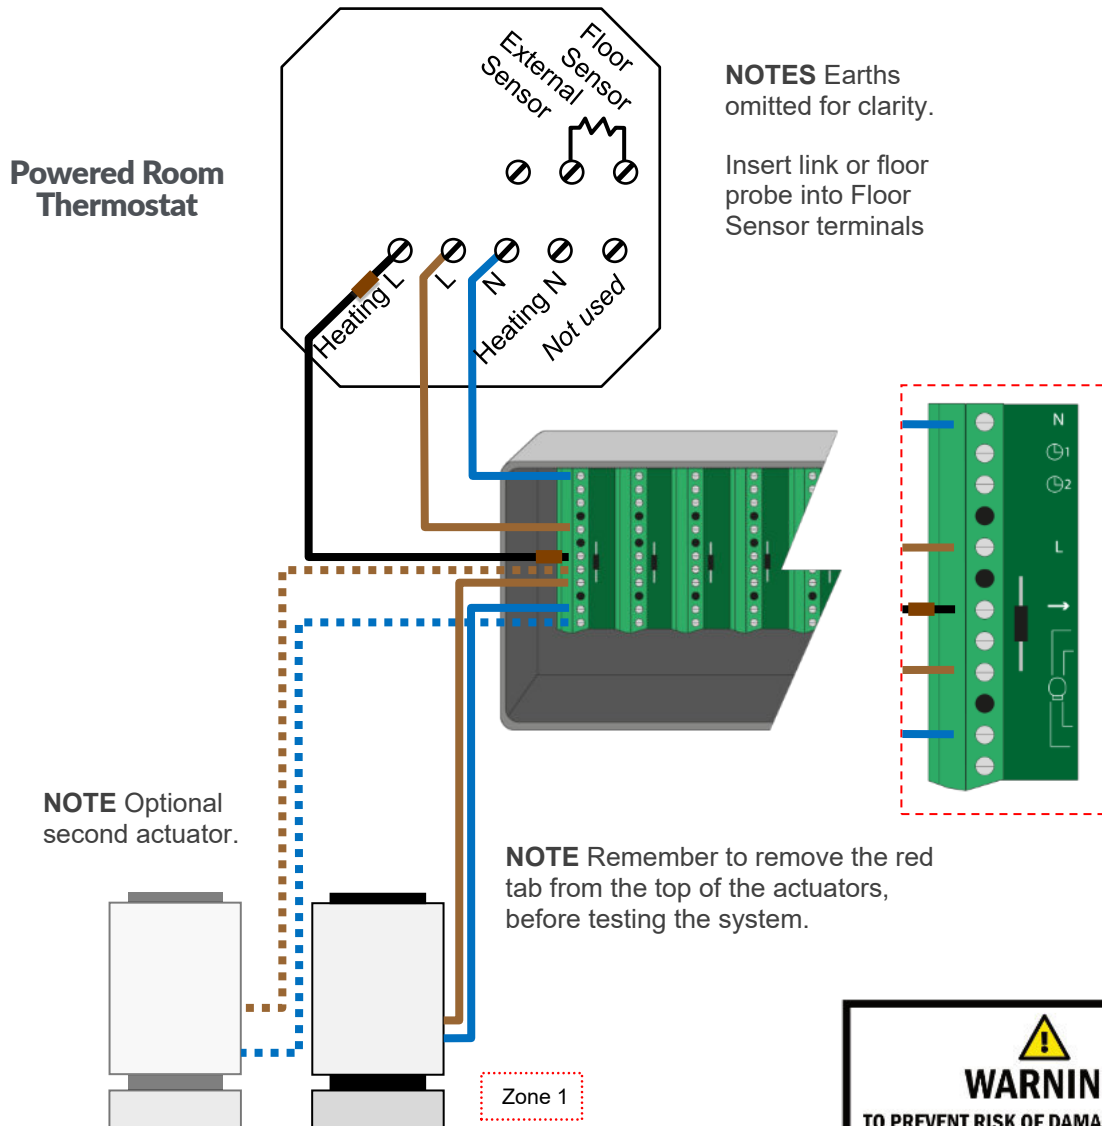


Internal Wiring Diagram



Single Channel Receiver

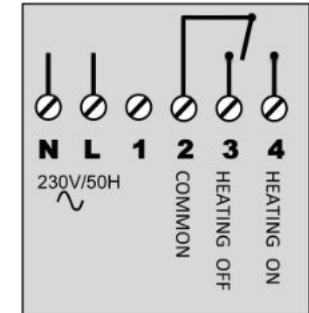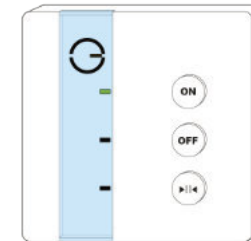

Electric Switch

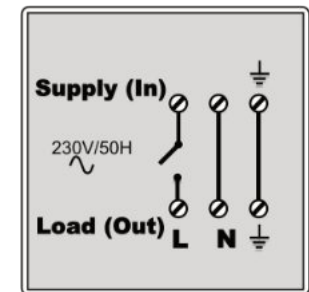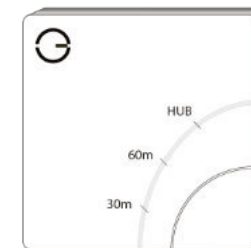

Powered Room Thermostat

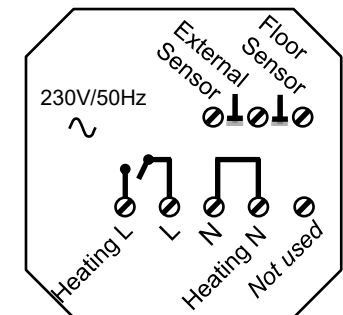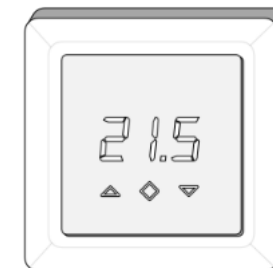

TIP: Take a photo of the existing wiring before you start to help you remember.

For more wiring diagrams see:
www.geniushub.co.uk/wiring