

TIP Take a photo of the existing wiring before you start to help you remember.

For more wiring diagrams see:
www.geniushub.co.uk/wiring


NOTE: The underfloor heating manifold must be capable of circulating water with all actuators closed.

NOTE: The Underfloor Wiring Centre terminals for the Zone Valve and Manifold Pump are **Volt-Free**.





WARNING

TO PREVENT RISK OF DAMAGE OR SAFETY HAZARDS, THIS EQUIPMENT SHOULD BE ONLY INSTALLED BY QUALIFIED OR COMPETENT PERSONS AND IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL REGULATIONS

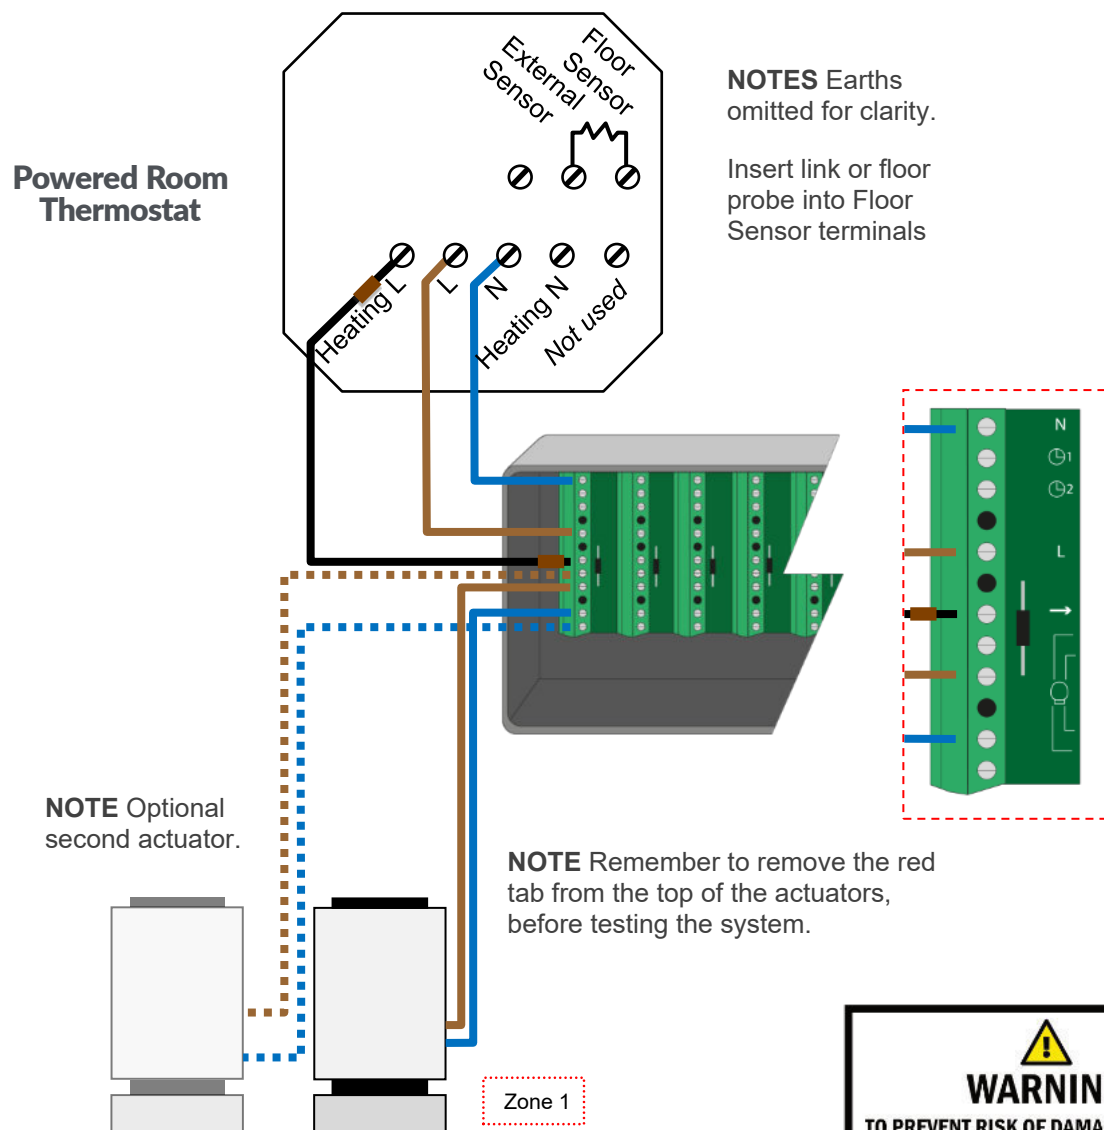


Internal Wiring Diagram

Electric Switch

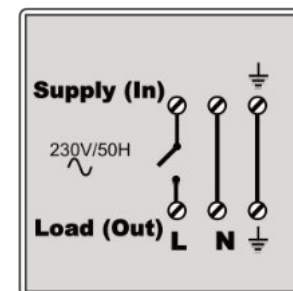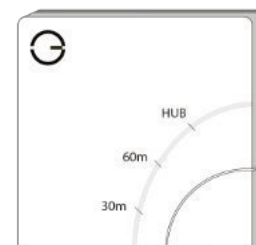

Powered Room Thermostat

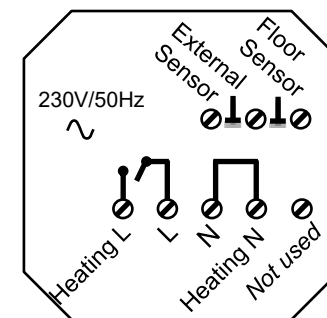

TIP: Take a photo of the existing wiring before you start to help you remember.

For more wiring diagrams see:
www.geniushub.co.uk/wiring