

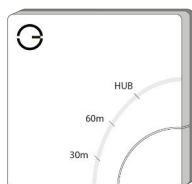


NOTE: The Receiver Units are mains powered and require either a separate 3A fused spur or connection directly into the boiler if the boiler is powered from a 3A fused spur.

Electric Switch

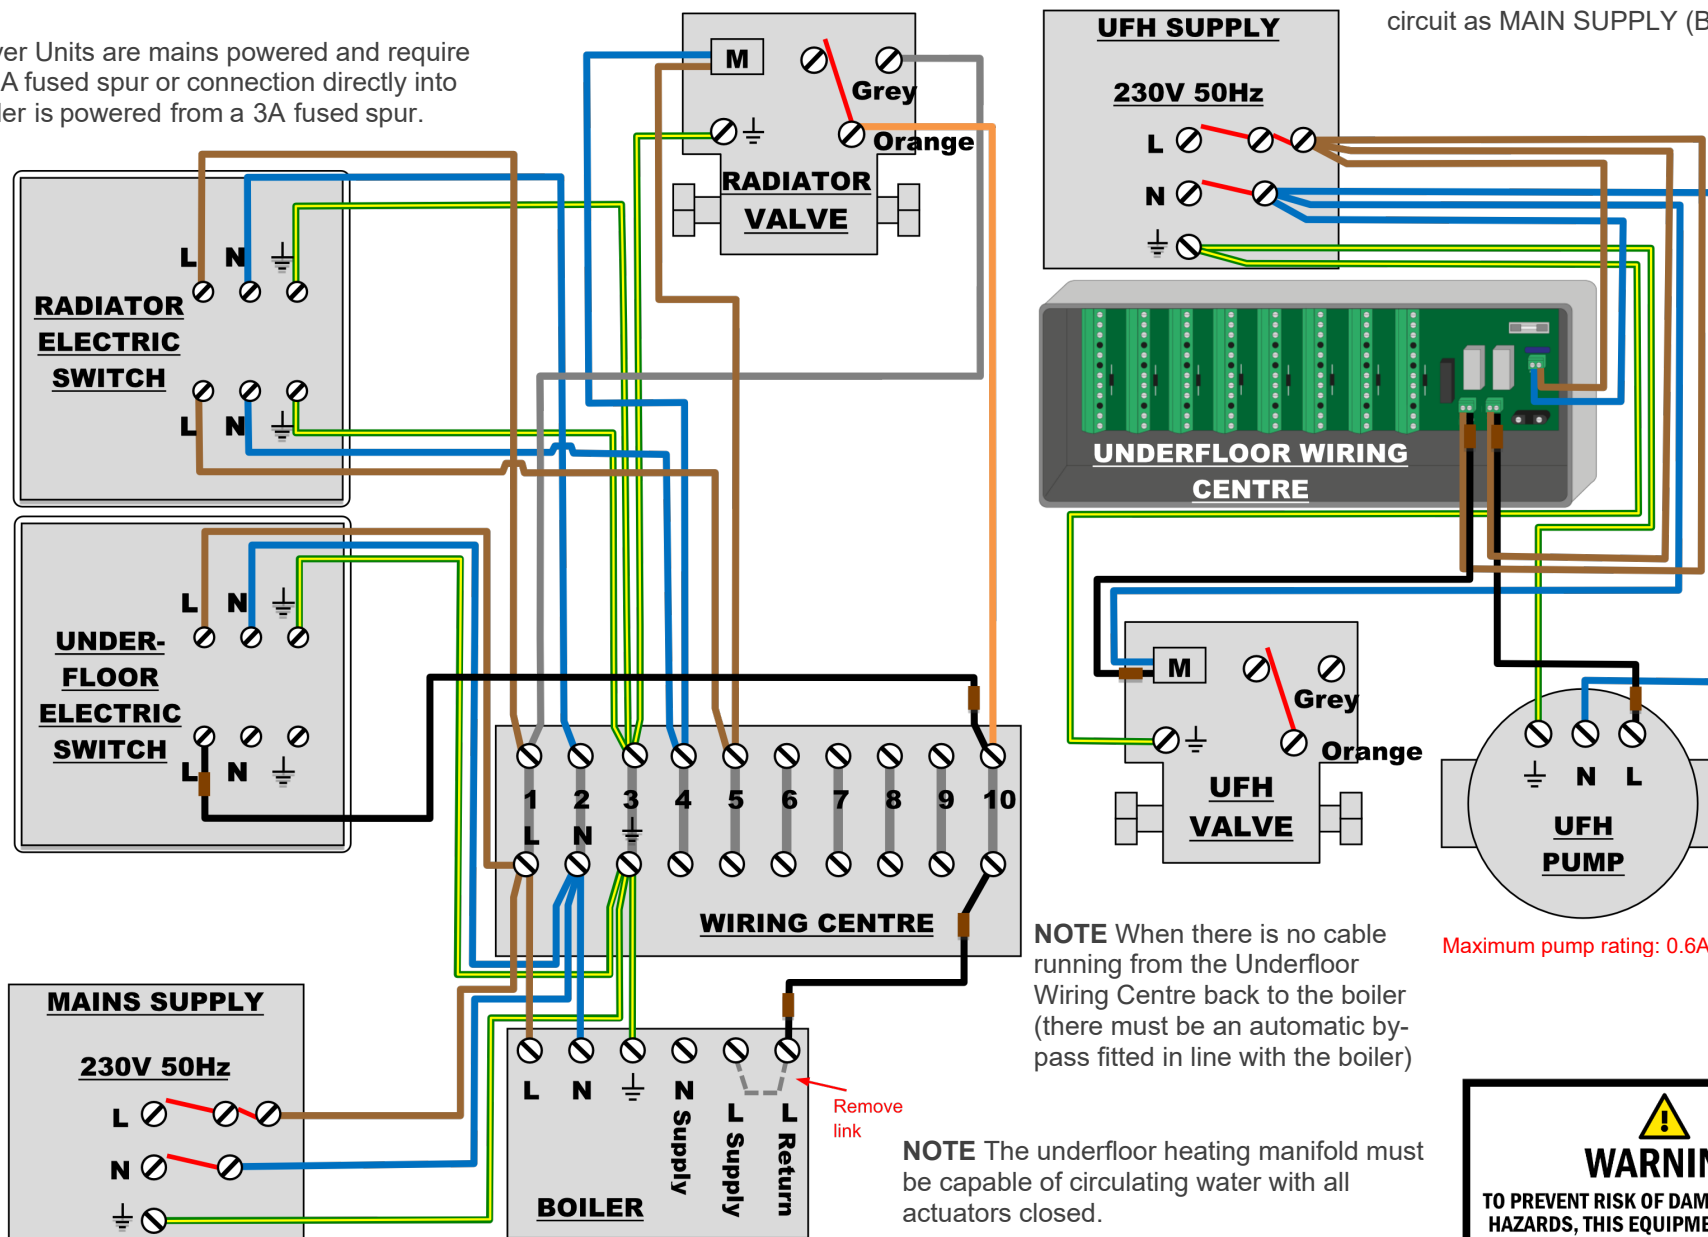

Electric Switch

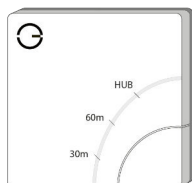


NOTE: UFH SUPPLY must be on same circuit as MAIN SUPPLY (Boiler)

Maximum pump rating: 0.6A



TIP Take a photo of the existing wiring before you start to help you remember.
For more wiring diagrams see: www.geniushub.co.uk/wiring



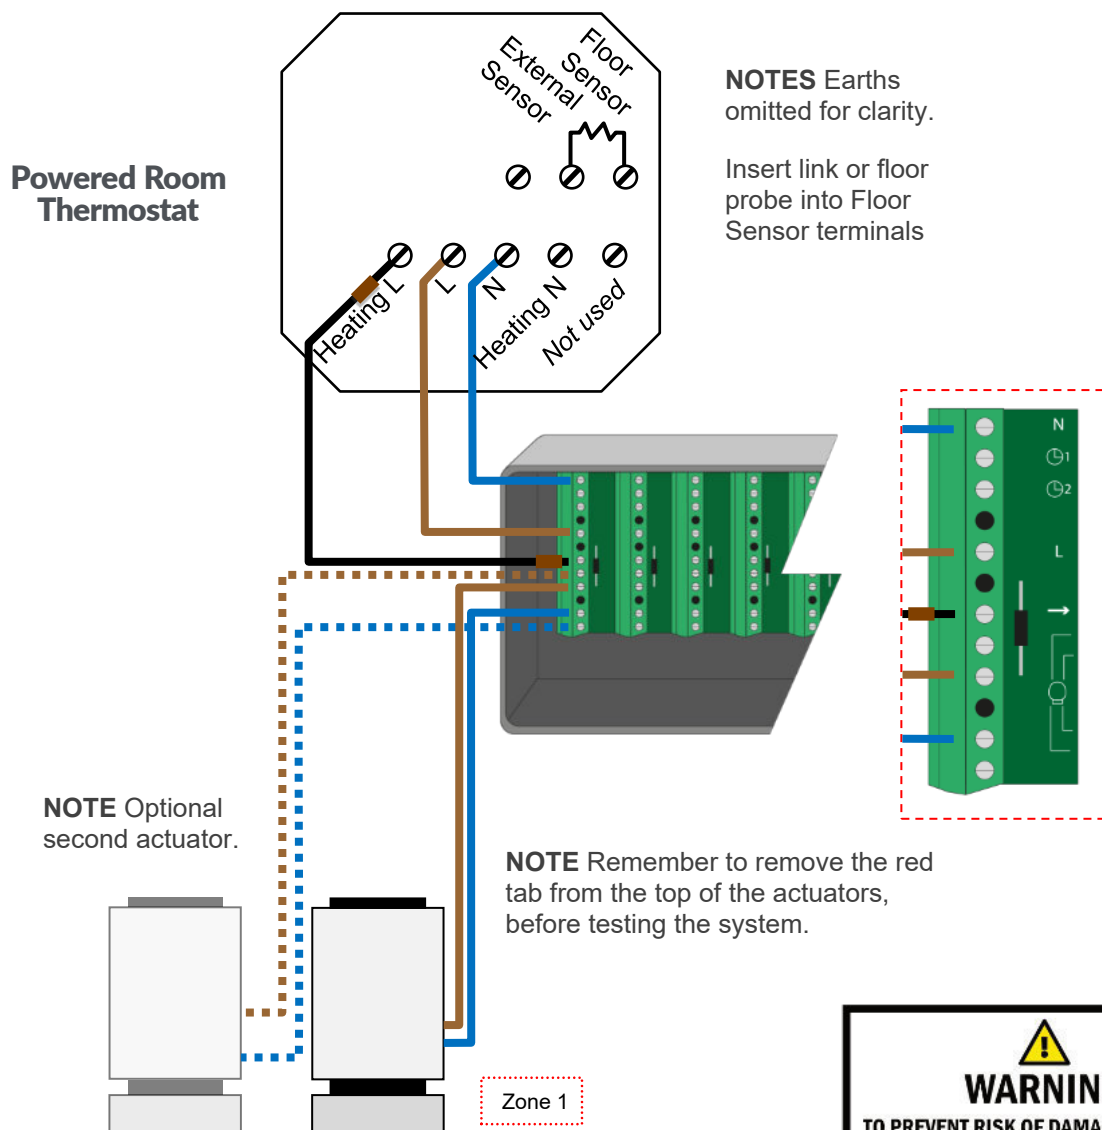


Internal Wiring Diagram

Electric Switch

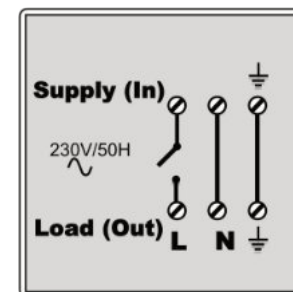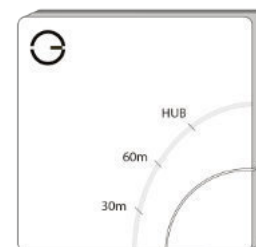

Powered Room Thermostat

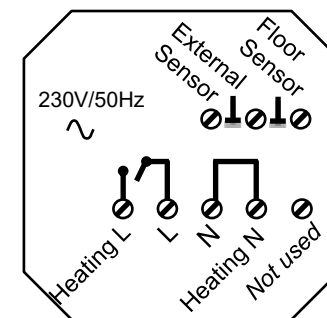

TIP: Take a photo of the existing wiring before you start to help you remember.

For more wiring diagrams see:
www.geniushub.co.uk/wiring