



Electric Switch

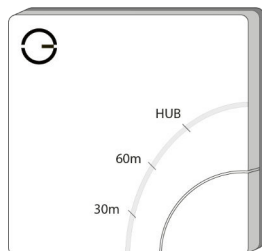


WARNING

TO PREVENT RISK OF DAMAGE OR SAFETY HAZARDS, THIS EQUIPMENT SHOULD BE ONLY INSTALLED BY QUALIFIED OR COMPETENT PERSONS AND IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL REGULATIONS

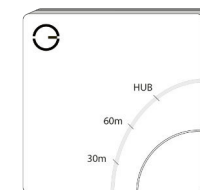

Electric Switch


NOTE The underfloor heating manifold must be capable of circulating water with all actuators closed.

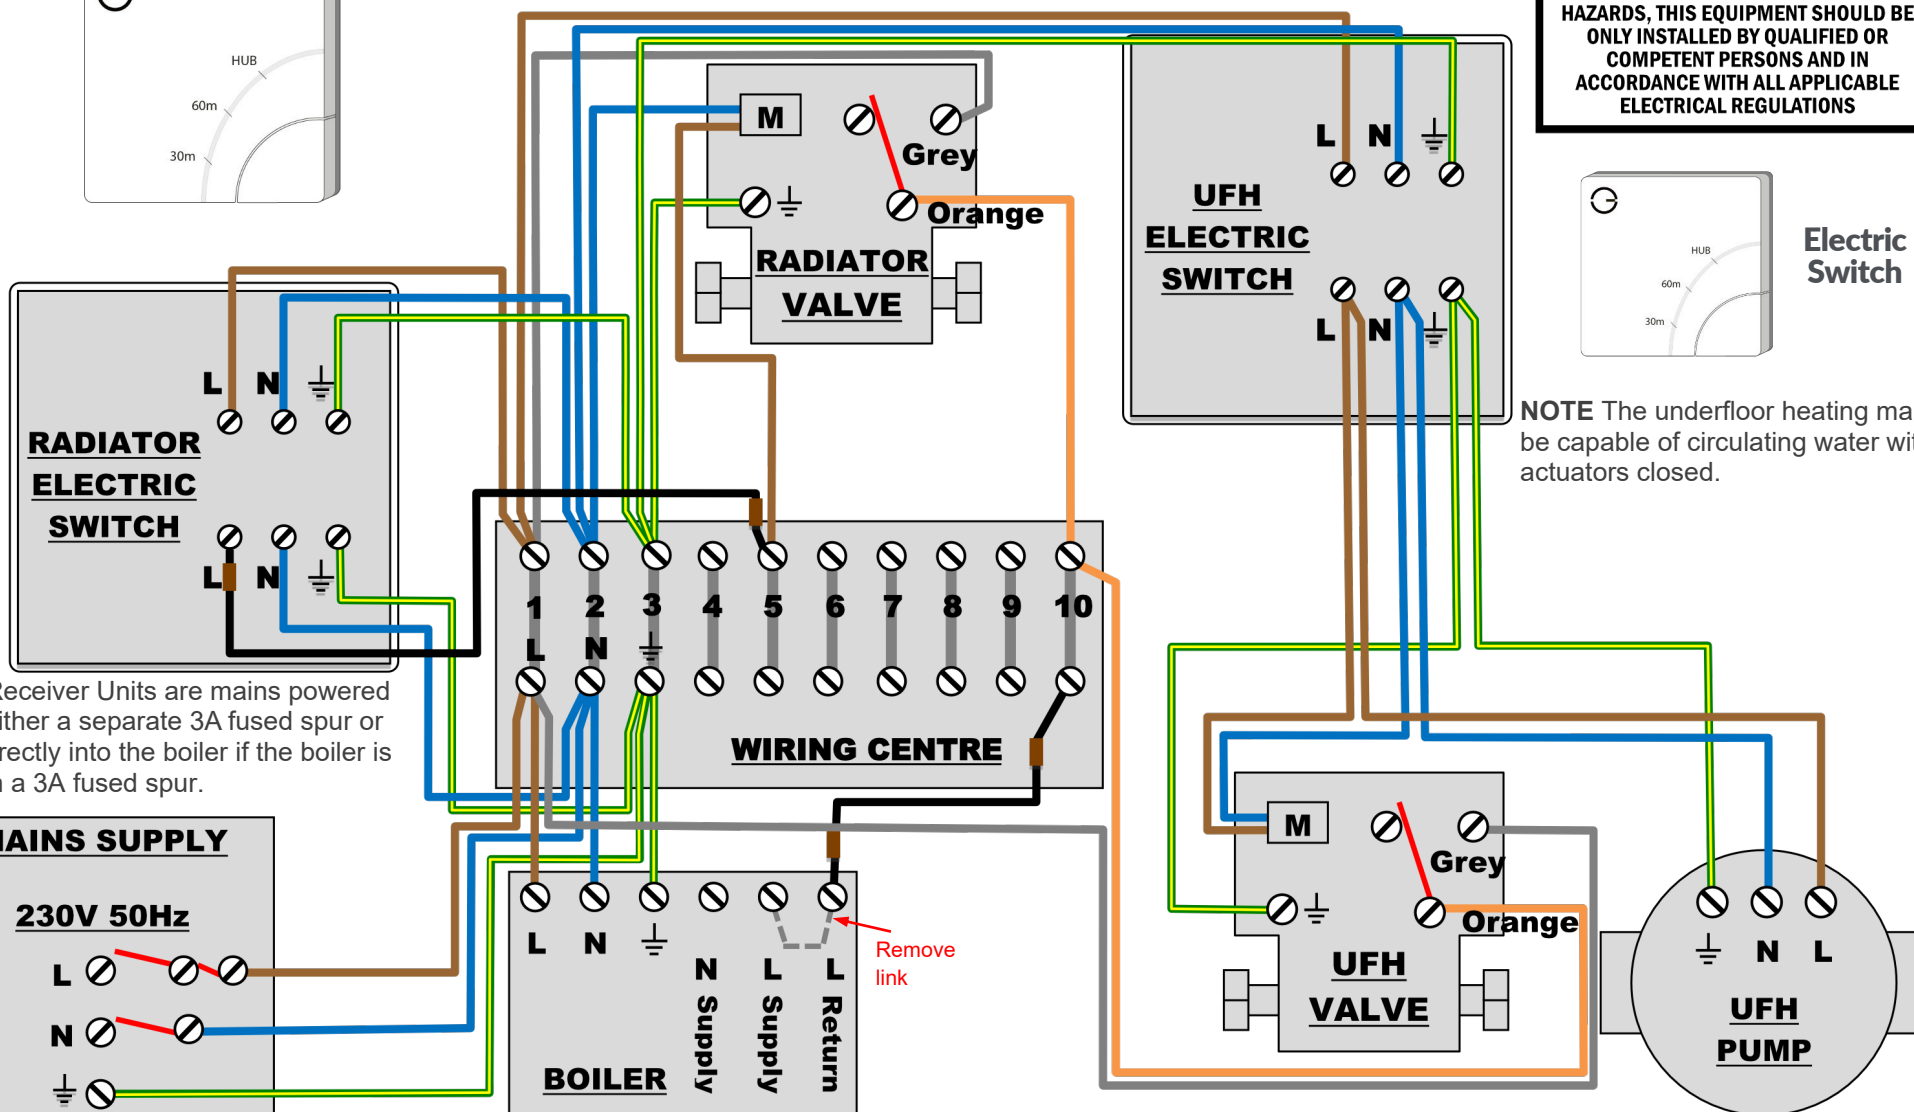

Maximum pump rating: 0.6A



NOTE: The Receiver Units are mains powered and require either a separate 3A fused spur or connection directly into the boiler if the boiler is powered from a 3A fused spur.

TIP: Take a photo of the existing wiring before you start to help you remember.
For more wiring diagrams see: www.geniushub.co.uk/wiring


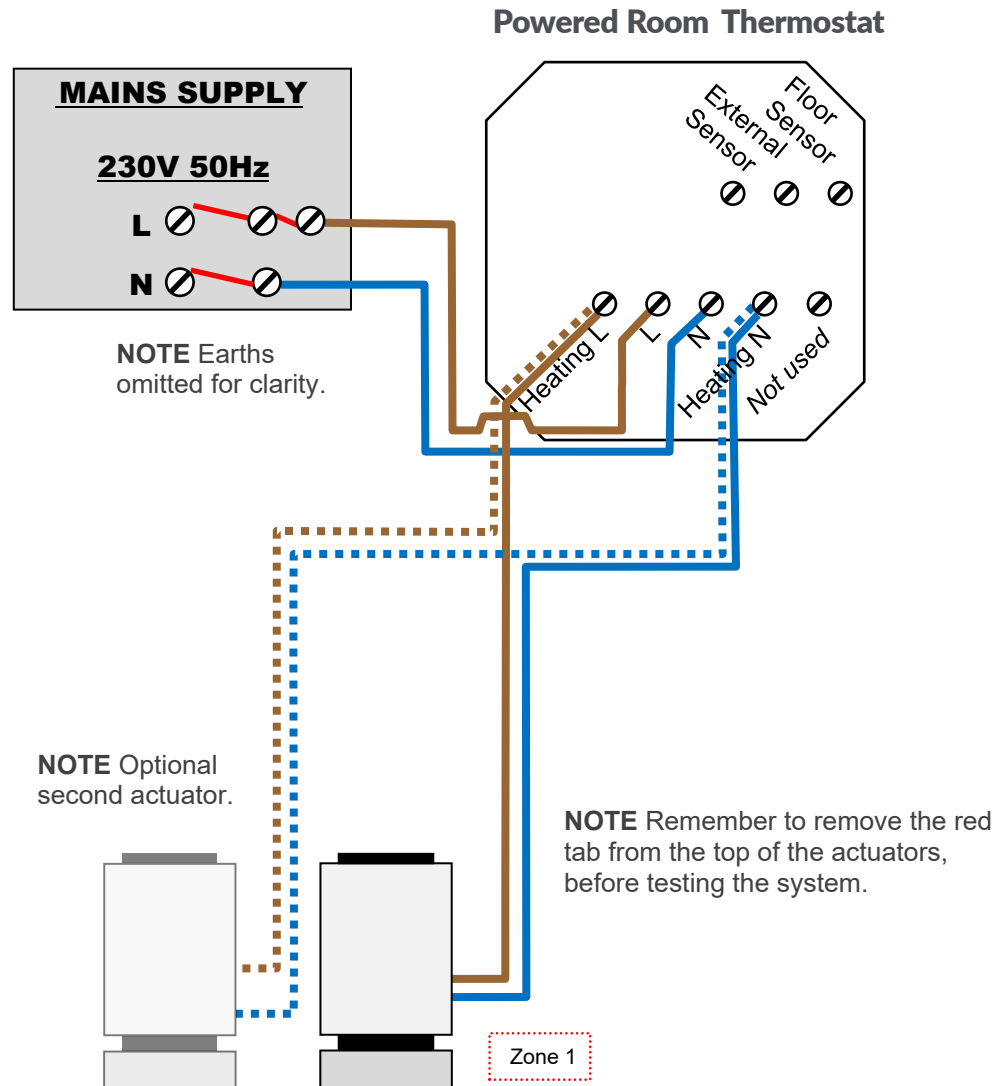


Internal Wiring Diagram

Electric Switch

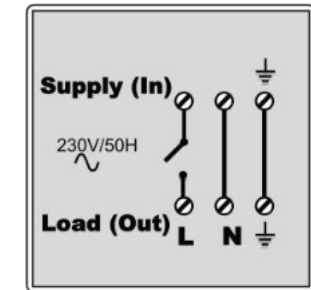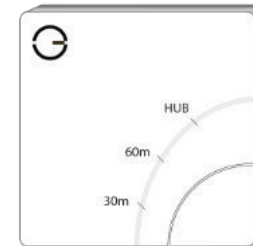

Powered Room Thermostat

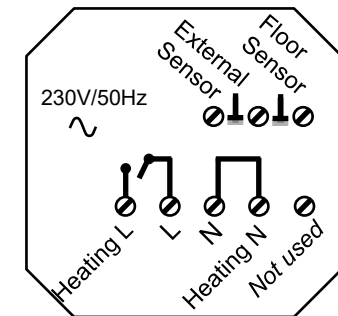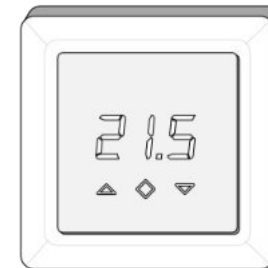

WARNING

TO PREVENT RISK OF DAMAGE OR SAFETY HAZARDS, THIS EQUIPMENT SHOULD BE ONLY INSTALLED BY QUALIFIED OR COMPETENT PERSONS AND IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL REGULATIONS