

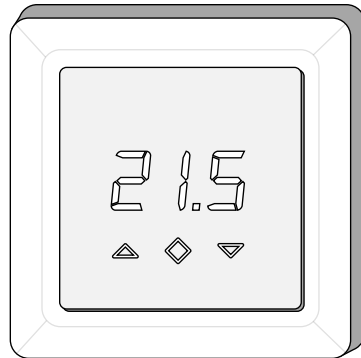


Powered Thermostat

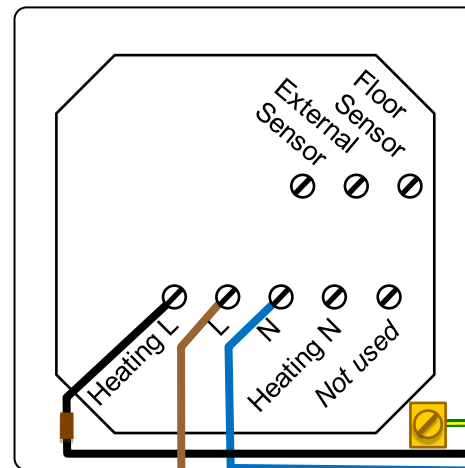


Internal Wiring Diagram

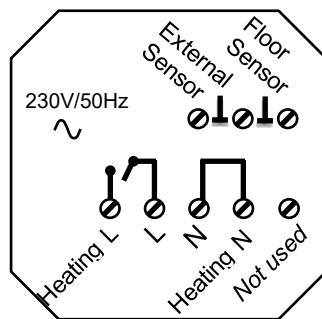

TIP: Take a photo of the existing wiring before you start to help you remember. For more wiring diagrams see: www.geniushub.co.uk/wiring

NOTE: Insert link into Floor Sensor terminals

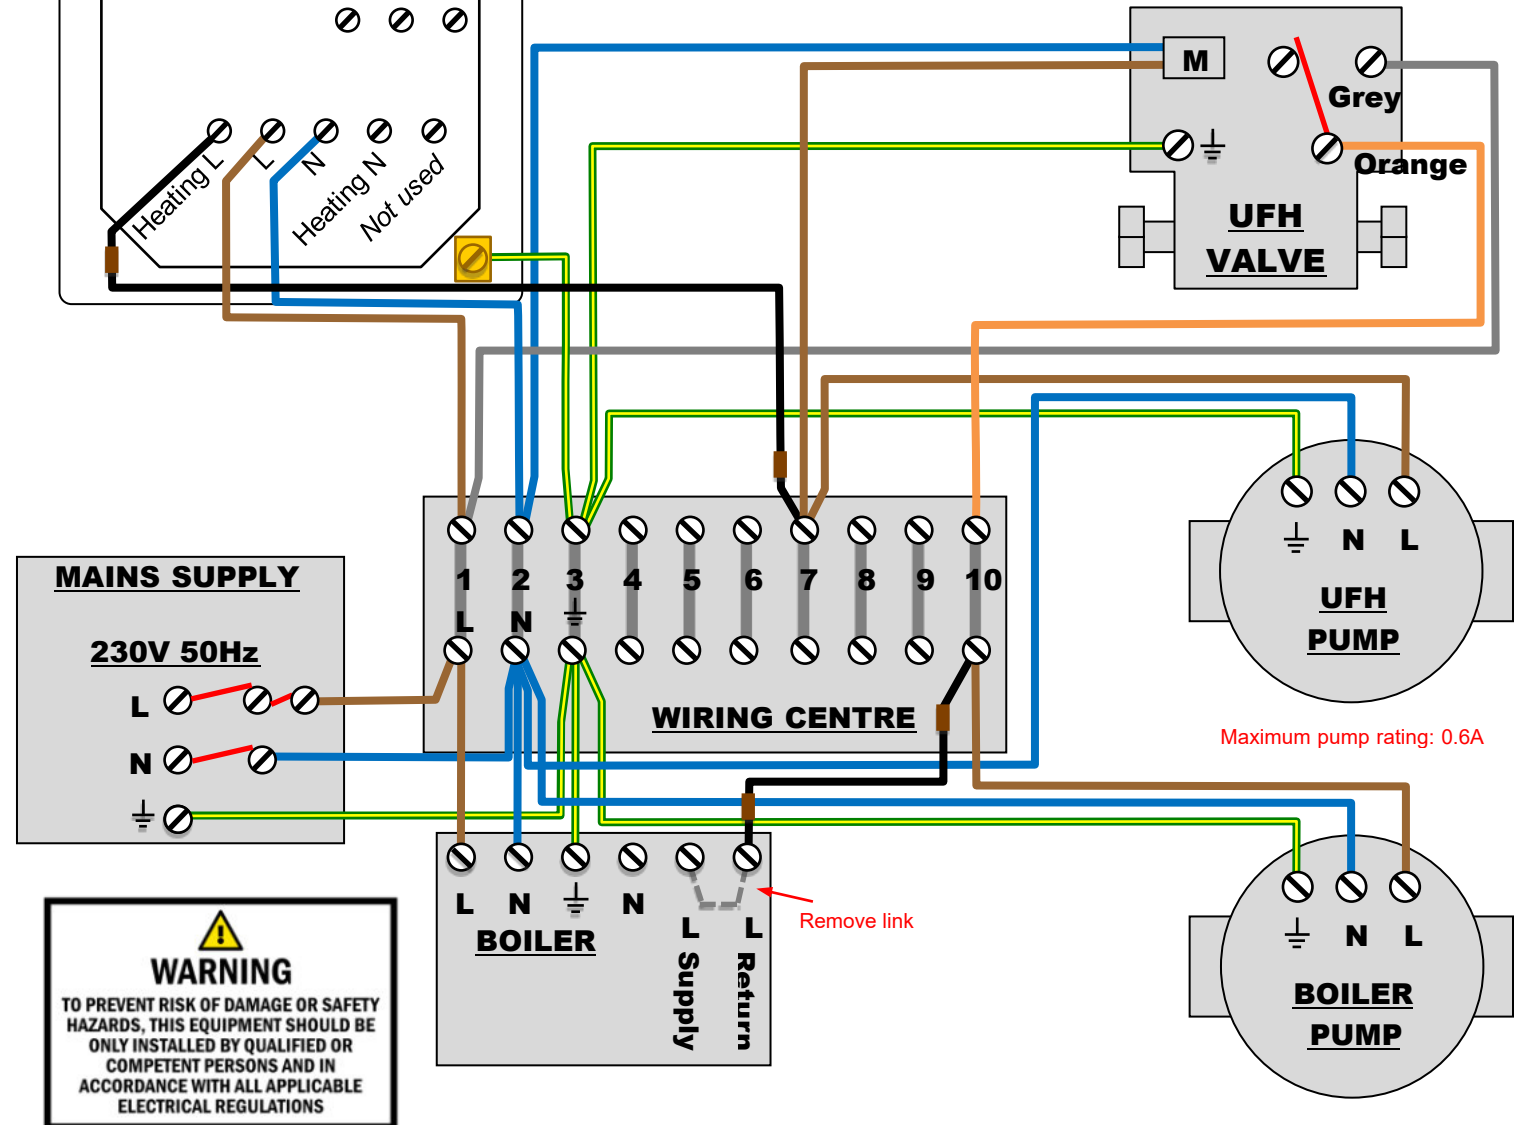

NOTE: The Powered Thermostat is mains powered and requires either a separate 3A fused spur or connection directly into the boiler if the boiler is powered from a 3A fused spur. For installation instructions see: <https://docs2.geniushub.co.uk/support/5-installing-the-underfloor-receiver-units>