



NOTE The Receiver Units are mains powered and require either a separate 3A fused spur or connection directly into the boiler if the boiler is powered from a 3A fused spur.


Electric Switch

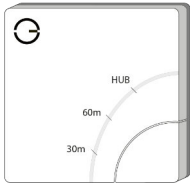

Electric Switch





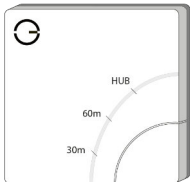


Electric Switch

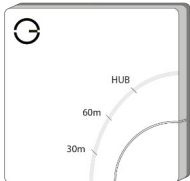

MAINS SUPPLY

230V 50Hz

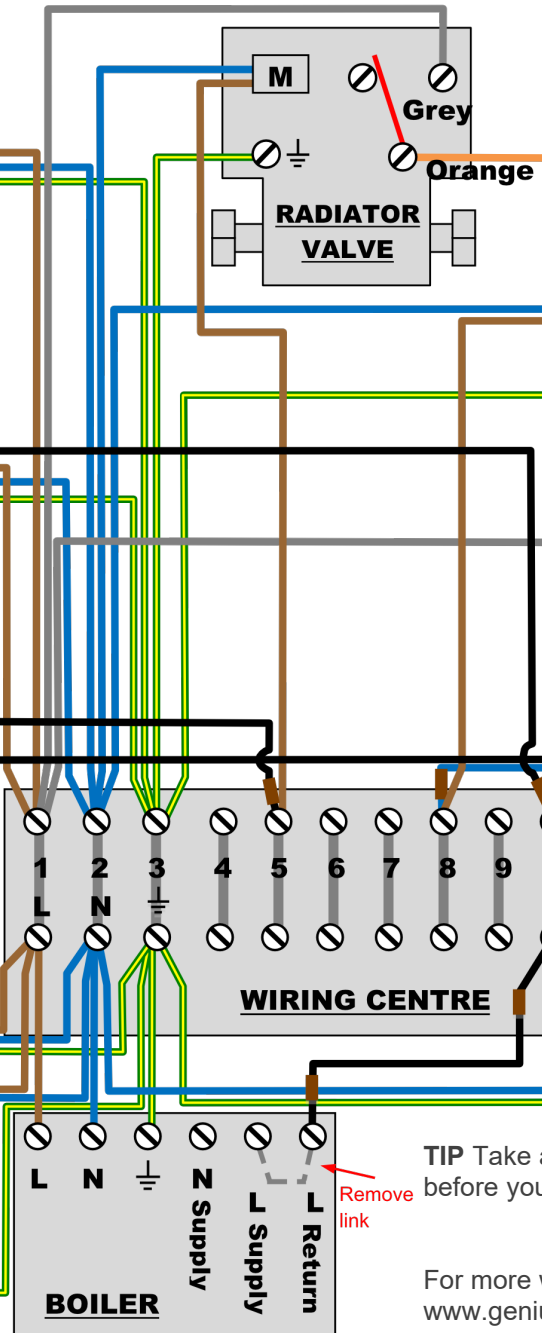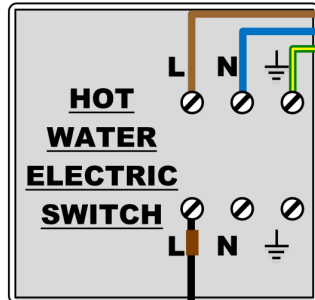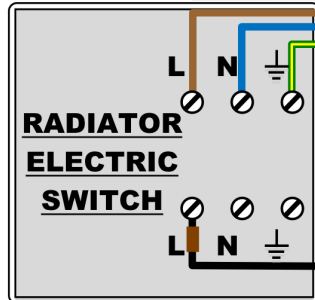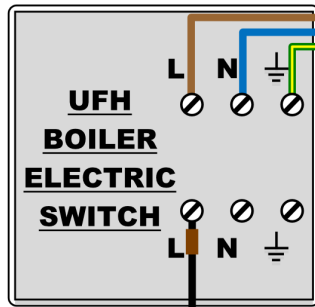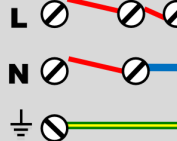

WARNING

TO PREVENT RISK OF DAMAGE OR SAFETY HAZARDS, THIS EQUIPMENT SHOULD BE ONLY INSTALLED BY QUALIFIED OR COMPETENT PERSONS AND IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL REGULATIONS


CYLINDER STAT

2 Satisfied
COM
1 Call for heat


NOTE: For safety, it is mandatory that at the original tank/cylinder thermostat remains in the circuit, left to maximum hot water temperature (65°C).

TIP Take a photo of the existing wiring before you start to help you.


For more wiring diagrams see:
www.geniushub.co.uk/wiring

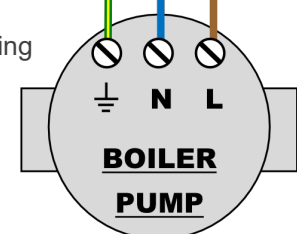

Without Underfloor Wiring Centre

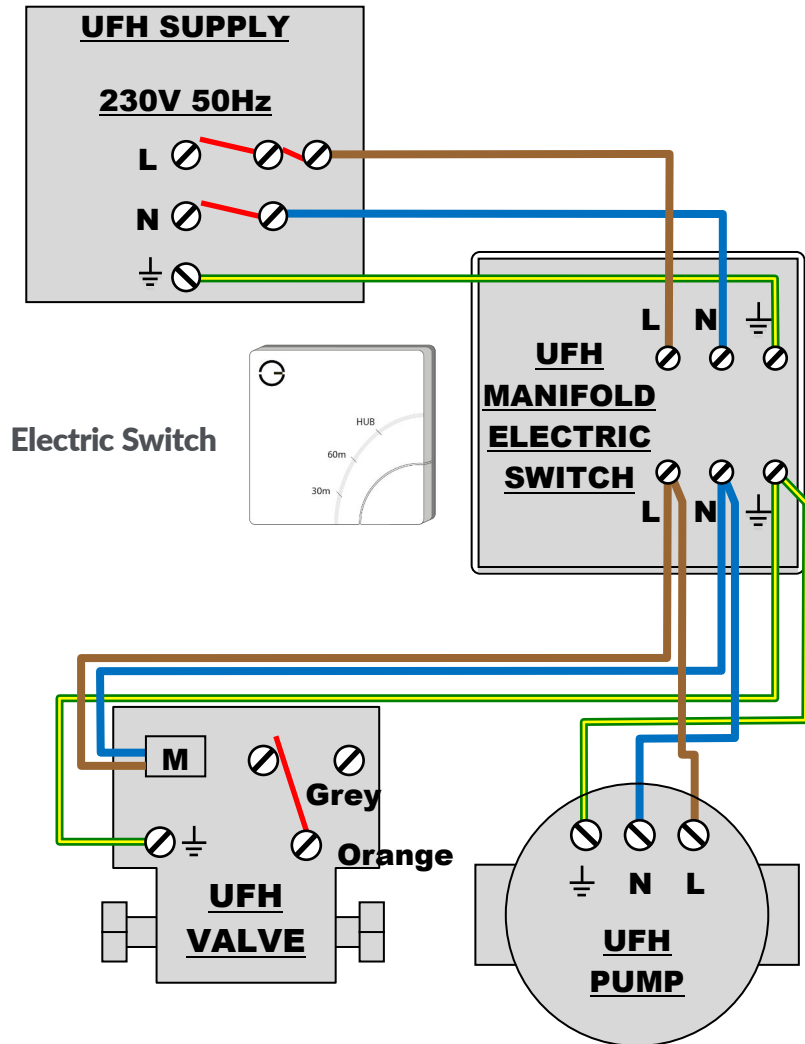

With Underfloor Wiring Centre

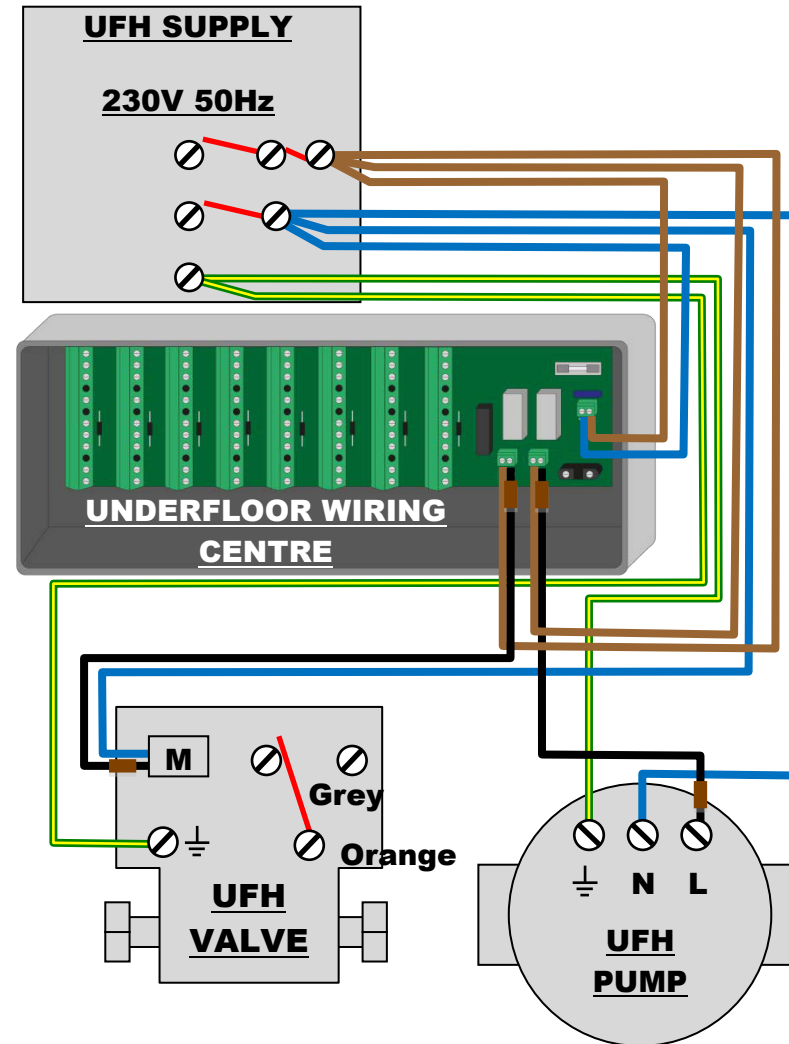


WARNING


TO PREVENT RISK OF DAMAGE OR SAFETY HAZARDS, THIS EQUIPMENT SHOULD BE ONLY INSTALLED BY QUALIFIED OR COMPETENT PERSONS AND IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL REGULATIONS

NOTE: UFH SUPPLY must be on same circuit as MAIN SUPPLY (Boiler)


NOTE When there is no cable running from the Underfloor Wiring Centre back to the boiler (there must be an automatic bypass fitted in line with the boiler)

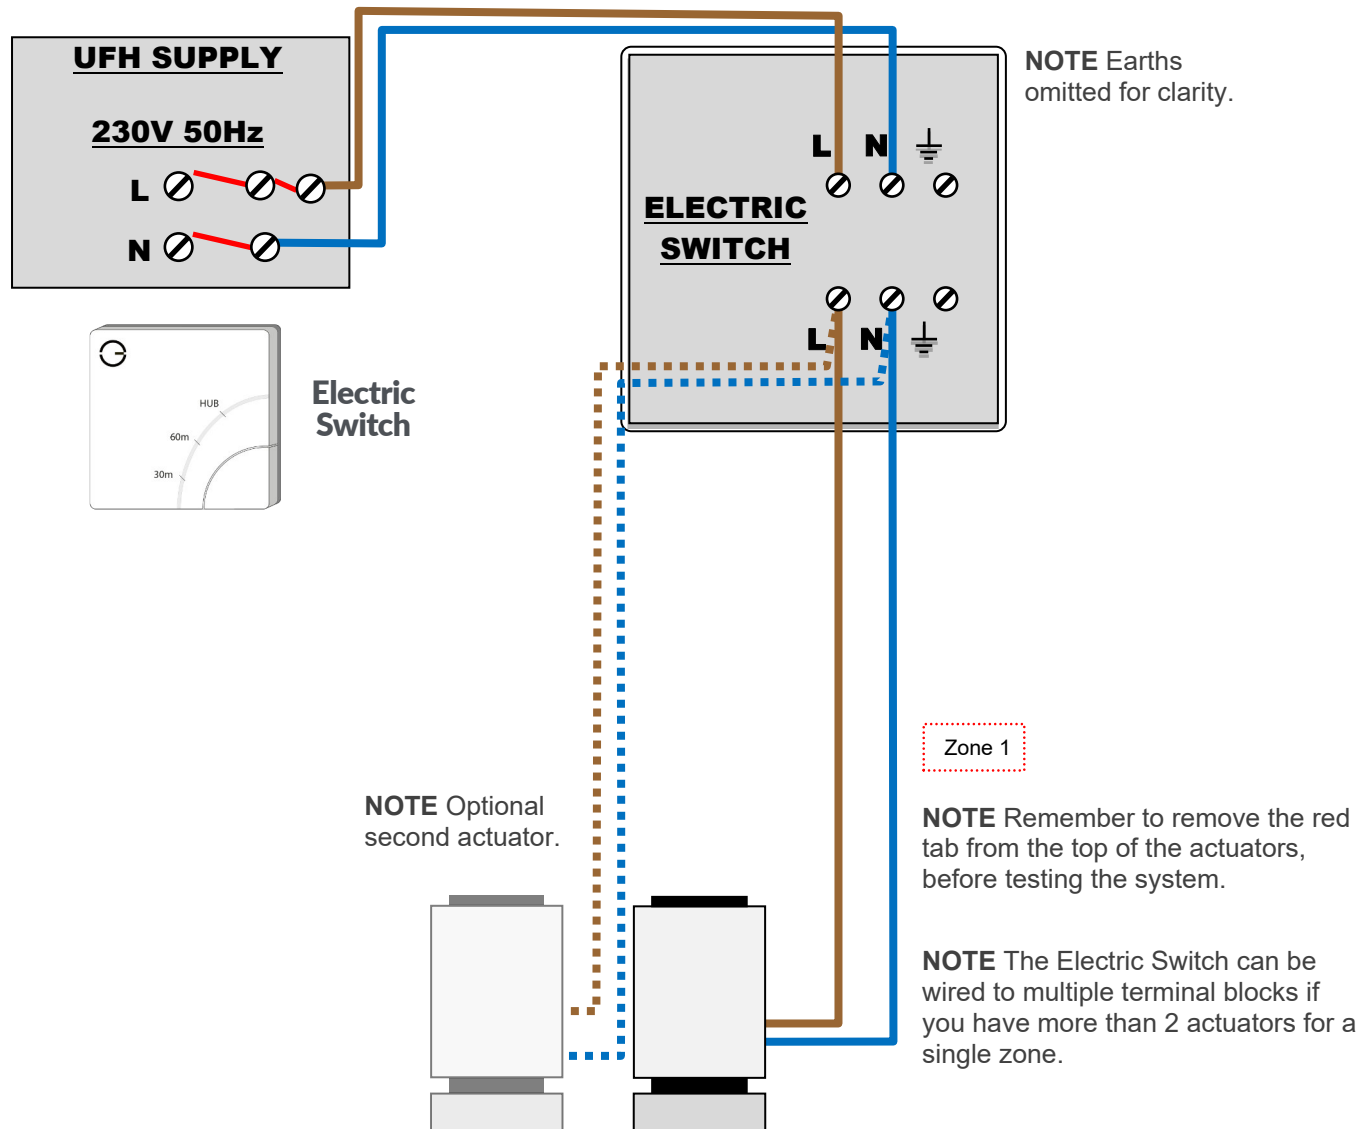

Internal Wiring Diagram

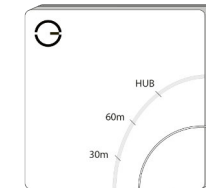



Electric Switch

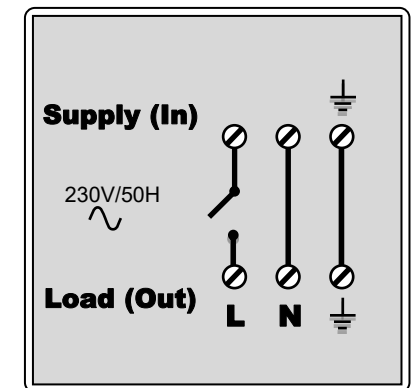

WARNING


TO PREVENT RISK OF DAMAGE OR SAFETY HAZARDS, THIS EQUIPMENT SHOULD BE ONLY INSTALLED BY QUALIFIED OR COMPETENT PERSONS AND IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL REGULATIONS

Electric Switch

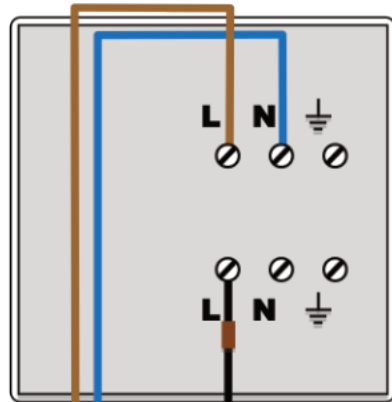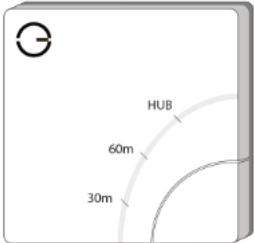


NOTE Earths omitted for clarity.

Zone 1

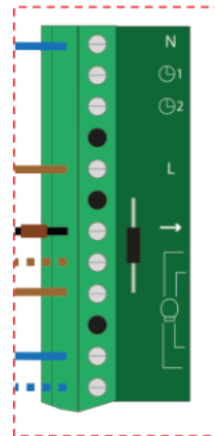

NOTE Optional second actuator.

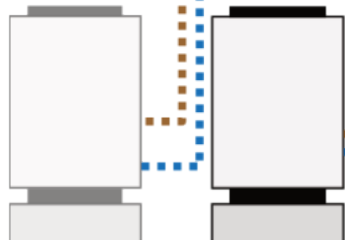

NOTE Remember to remove the red tab from the top of the actuators, before testing the system.




NOTE The Electric Switch can be wired to multiple terminal blocks if you have more than 2 actuators for a single zone.

Internal Wiring Diagram

Single Channel Receiver



Electric Switch

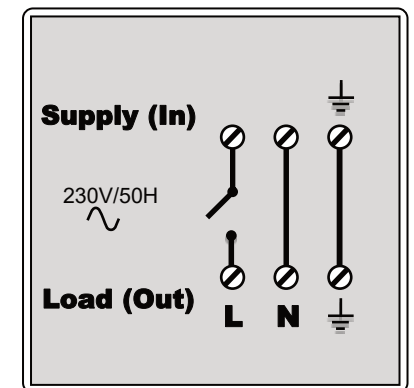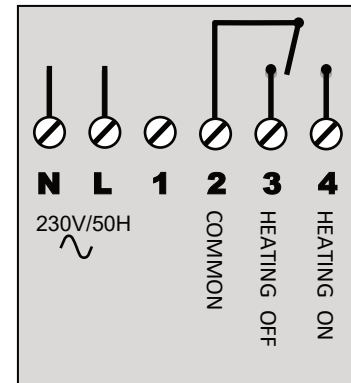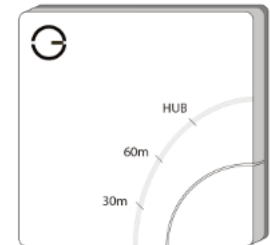

TIP Take a photo of the existing wiring before you start to help you remember.

For more wiring diagrams see:
www.geniushub.co.uk/wiring



WARNING

TO PREVENT RISK OF DAMAGE OR SAFETY HAZARDS, THIS EQUIPMENT SHOULD BE ONLY INSTALLED BY QUALIFIED OR COMPETENT PERSONS AND IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL REGULATIONS