

TIP Take a photo of the existing wiring before you start to help you remember.

For more wiring diagrams see:
www.geniushub.co.uk/wiring

NOTE: The underfloor heating manifold must be capable of circulating water with all actuators closed.

NOTE: The Underfloor Wiring Centre terminals for the Zone Valve and Manifold Pump are **Volt-Free**.





WARNING

TO PREVENT RISK OF DAMAGE OR SAFETY HAZARDS, THIS EQUIPMENT SHOULD BE ONLY INSTALLED BY QUALIFIED OR COMPETENT PERSONS AND IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL REGULATIONS



Electric Switch

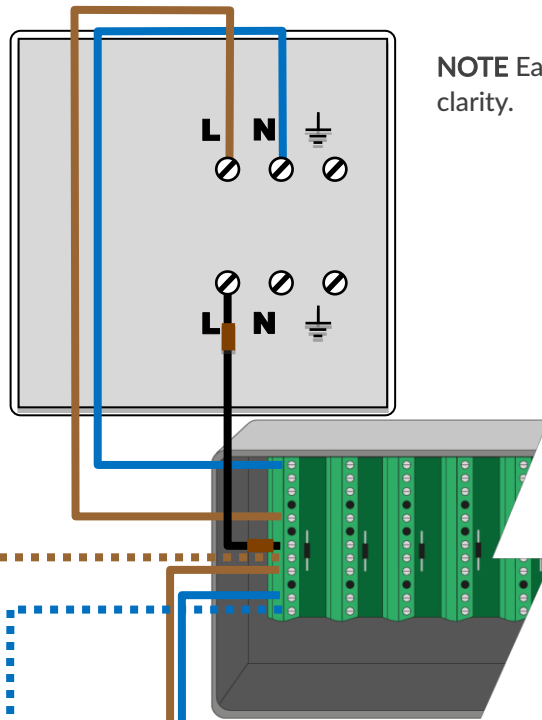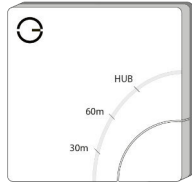


NOTE Earths omitted for clarity.

Zone 1

NOTE Remember to remove the red tab from the top of the actuators, before testing the system.



NOTE The Electric Switch can be wired to multiple terminal blocks if you have more than 2 actuators for a single zone.

NOTE Optional second actuator.

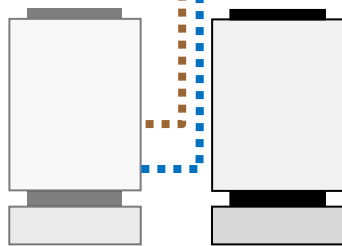

Internal Wiring Diagram

Electric Switch

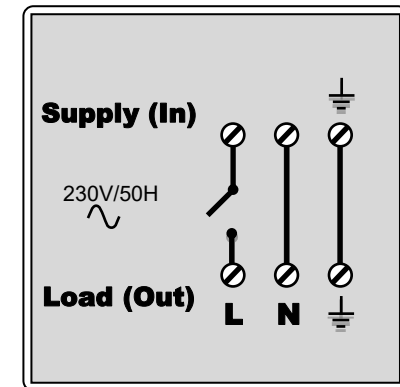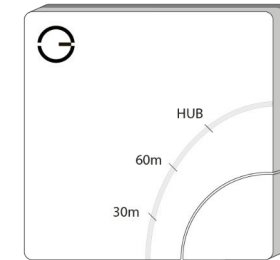

WARNING

TO PREVENT RISK OF DAMAGE OR SAFETY HAZARDS, THIS EQUIPMENT SHOULD BE ONLY INSTALLED BY QUALIFIED OR COMPETENT PERSONS AND IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL REGULATIONS