



Electric Switch

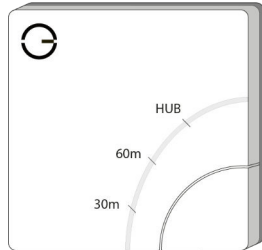


WARNING

TO PREVENT RISK OF DAMAGE OR SAFETY HAZARDS, THIS EQUIPMENT SHOULD BE ONLY INSTALLED BY QUALIFIED OR COMPETENT PERSONS AND IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL REGULATIONS






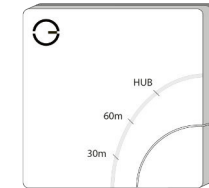


Electric Switch

NOTE The underfloor heating manifold must be capable of circulating water with all actuators closed.

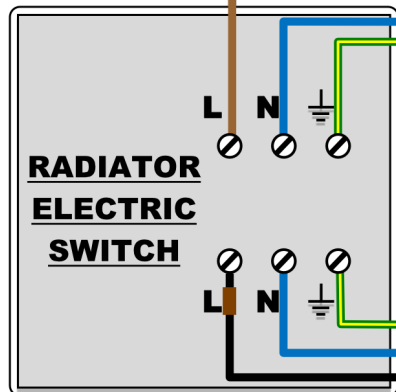


NOTE: The Receiver Units are mains powered and require either a separate 3A fused spur or connection directly into the boiler if the boiler is powered from a 3A fused spur.

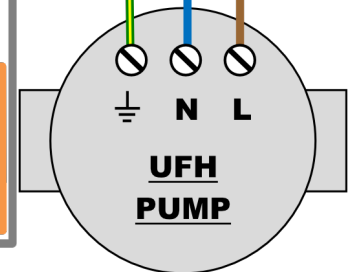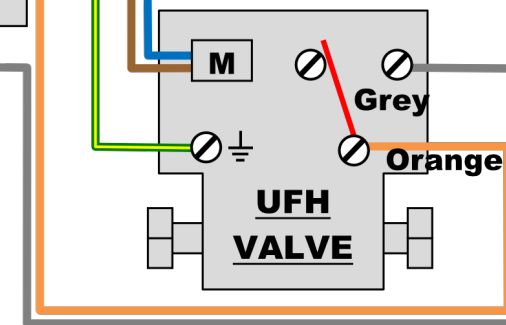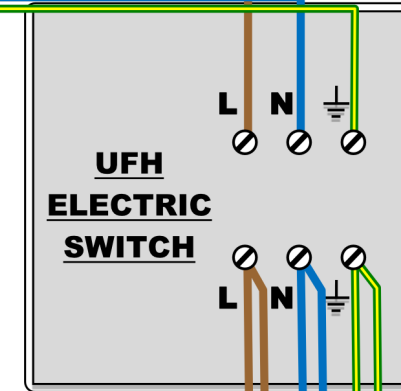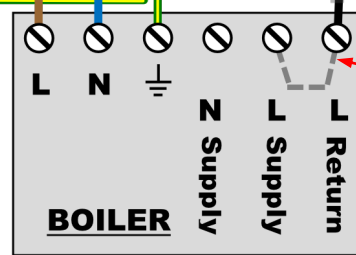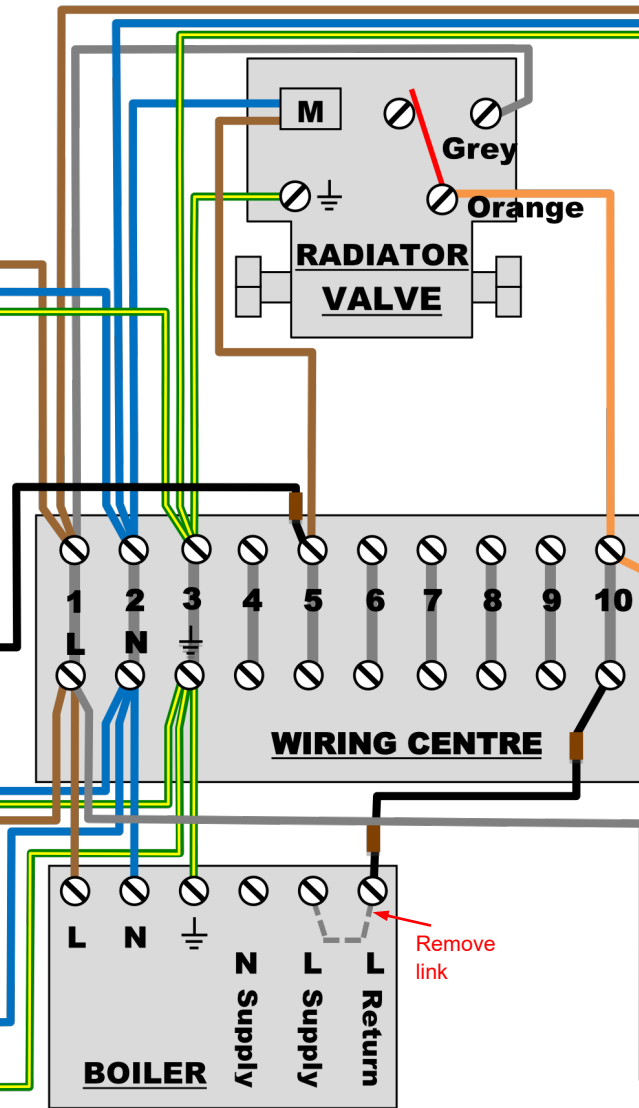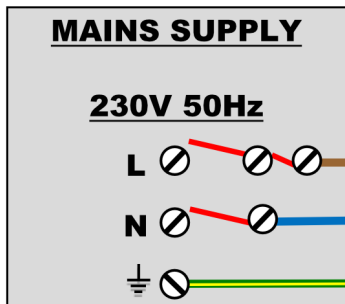


Maximum pump rating: 0.6A

TIP: Take a photo of the existing wiring before you start to help you remember.
For more wiring diagrams see: www.geniushub.co.uk/wiring



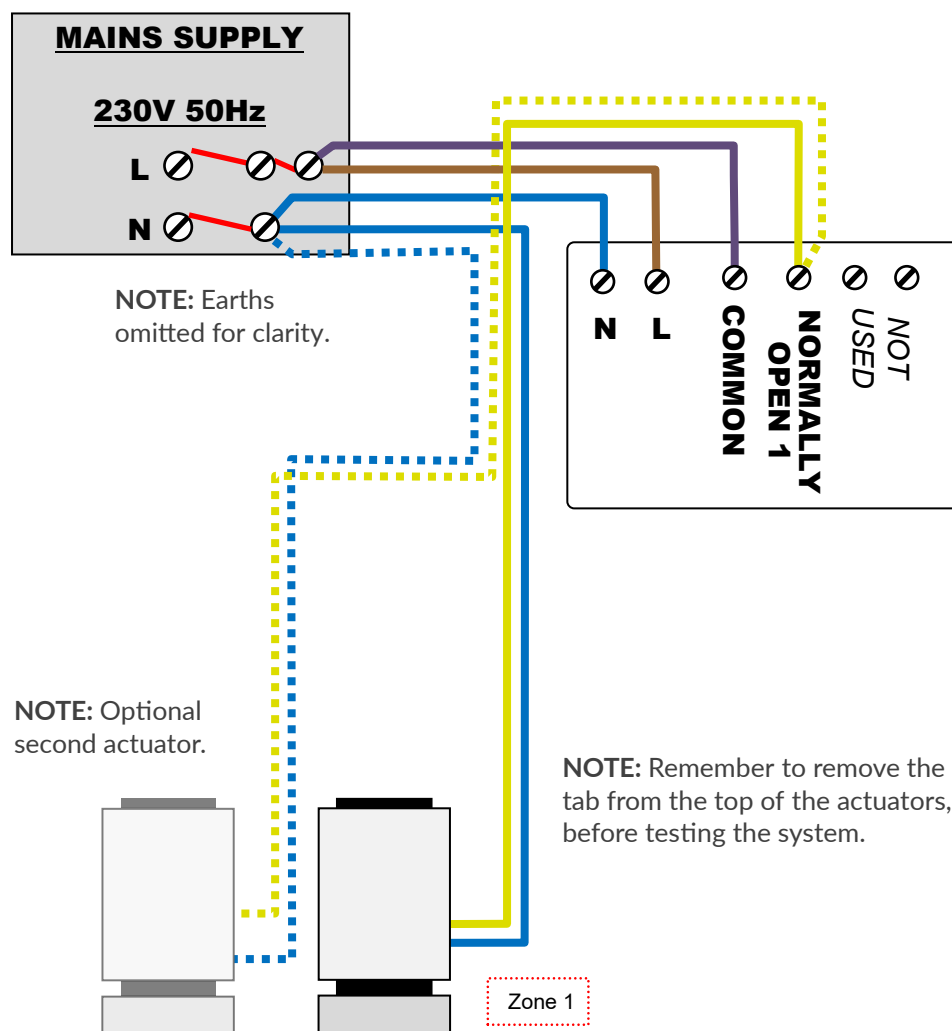


NOTE: Remember to remove the red tab from the top of the actuators, before testing the system.

Electric Switch

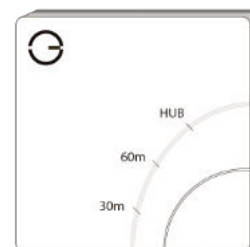

Electric Relay

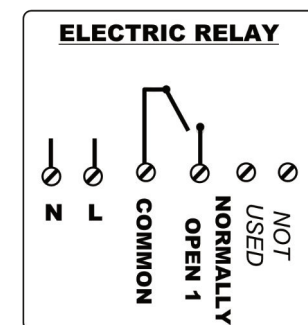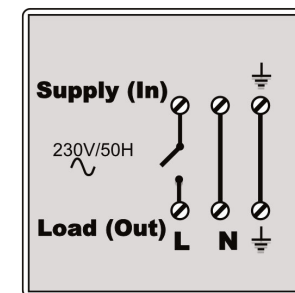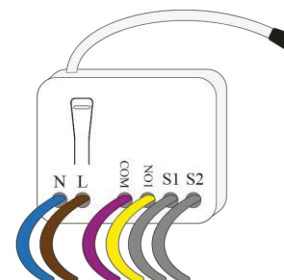

WARNING

TO PREVENT RISK OF DAMAGE OR SAFETY HAZARDS, THIS EQUIPMENT SHOULD BE ONLY INSTALLED BY QUALIFIED OR COMPETENT PERSONS AND IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL REGULATIONS