Single Channel Receiver - S Plan

Genius Hub Terminal	Boiler Terminal
N	2
L	1
1	Not Connected
2	Link from L
3	Not Connected
4	5

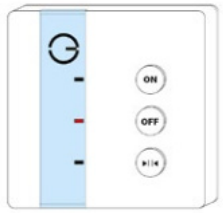

Single Channel Receiver

2) Common
4) Heating ON

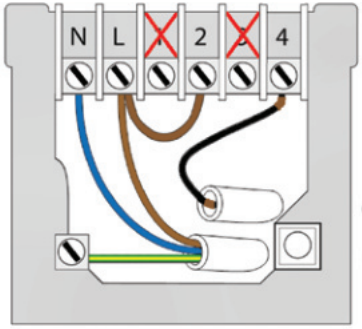

NOTE: For safety, it is recommended that the original tank/cylinder thermostat remains in the circuit, left to maximum hot water temperature (65°C).

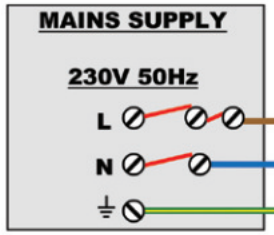

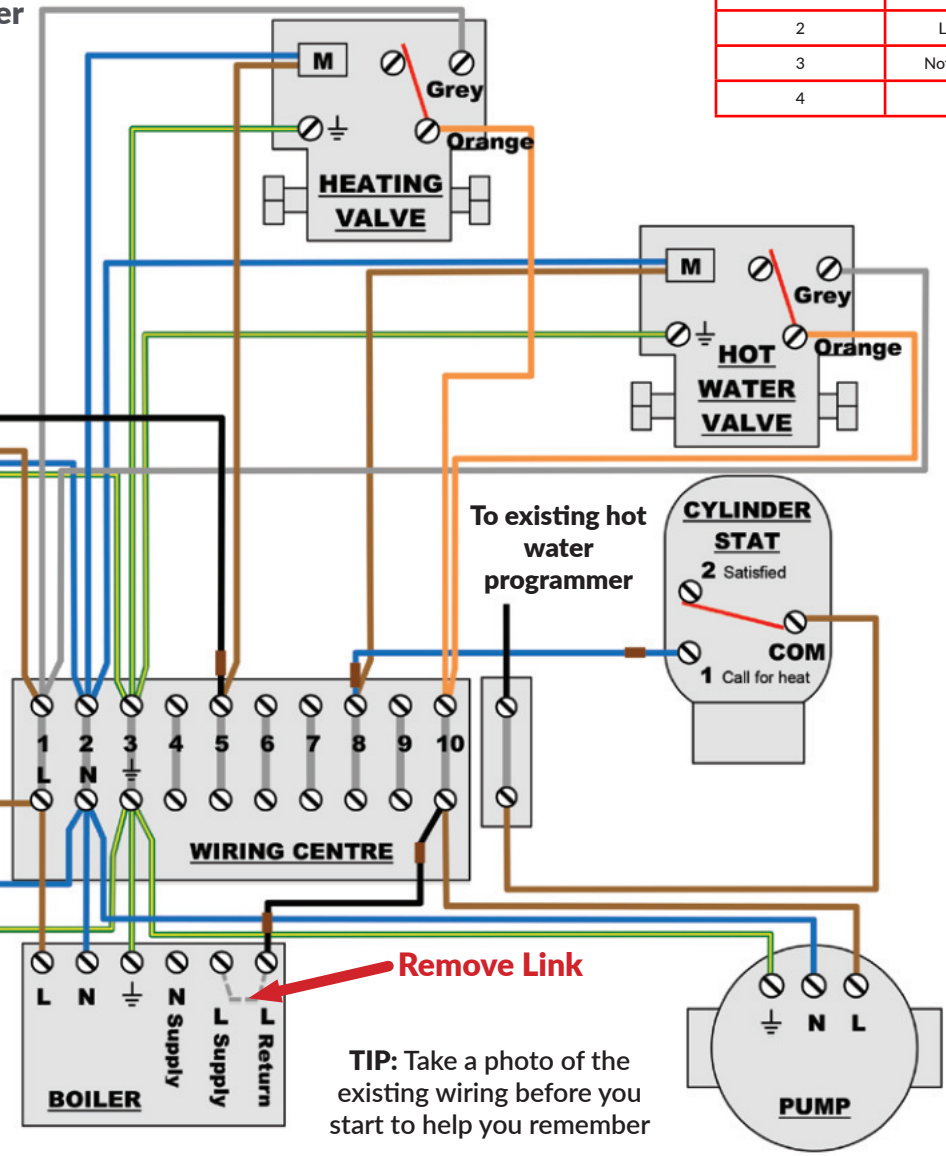

PLEASE NOTE: The boiler controller is mains powered and requires either a separate 3A fused spur orconnection directly into the boiler if the boiler is powered from a 3A fused spur.

TIP: Take a photo of the existing wiring before you start to help you remember