Powered Room Thermostat - Infra-Red Panel

Powered Room Thermostat

Internal Wiring Diagram

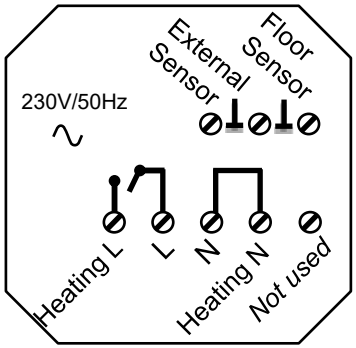

NOTE If the appliance/load has a fused spur then this needs to be retained. The Powered Thermostat should be wired in line with any existing fused spur.

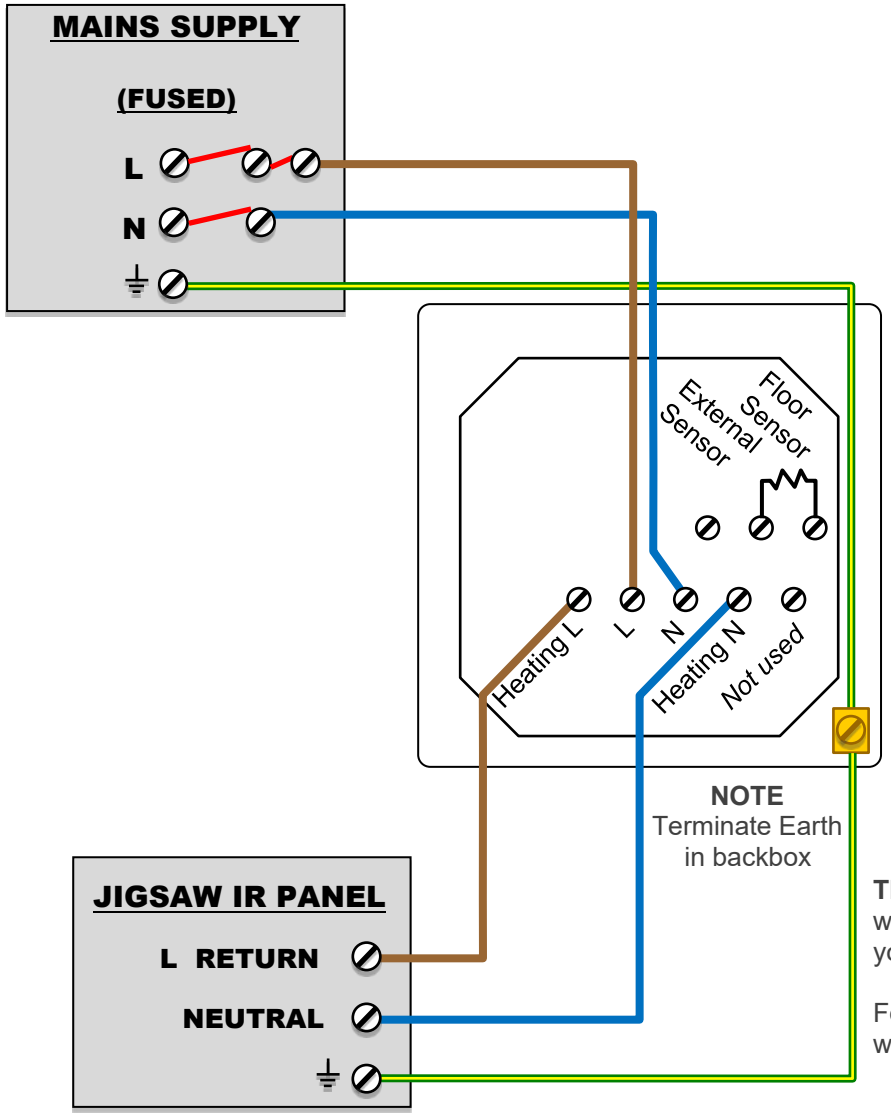

Powered Room Thermostat

NOTE Insert link or floor probe into Floor Sensor terminals

NOTE
Terminate Earth in backbox

TIP Take a photo of the existing wiring before you start to help you remember.

For more wiring diagrams see: www.geniushub.co.uk/wiring

WARNING

TO PREVENT RISK OF DAMAGE OR SAFETY HAZARDS, THIS EQUIPMENT SHOULD BE ONLY INSTALLED BY QUALIFIED OR COMPETENT PERSONS AND IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL REGULATIONS