






Internal Wiring Diagram

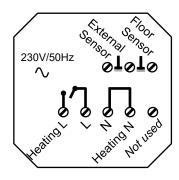

NOTE: If the electric underfloor heating has a fused spur then this needs to be retained. The Powered Thermostat should be wired in line with any existing fused spur.



TO PREVENT RISK OF DAMAGE OR SAFETY HAZARDS, THIS EQUIPMENT SHOULD BE ONLY INSTALLED BY QUALIFIED OR COMPETENT PERSONS AND IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL REGULATIONS TIP: Take a photo of the existing wiring before you start to help you remember.

