




## Powered RoomThermostat

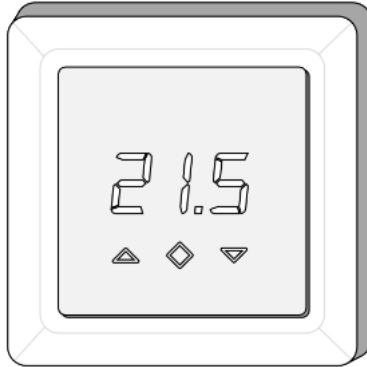

### POWERED THERMOSTAT

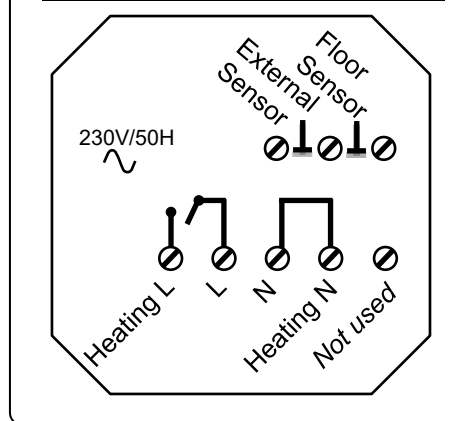

**NOTE** If the appliance/load has a fused spur then this needs to be retained. The Powered Thermostat should be wired in line with any existing fused spur.

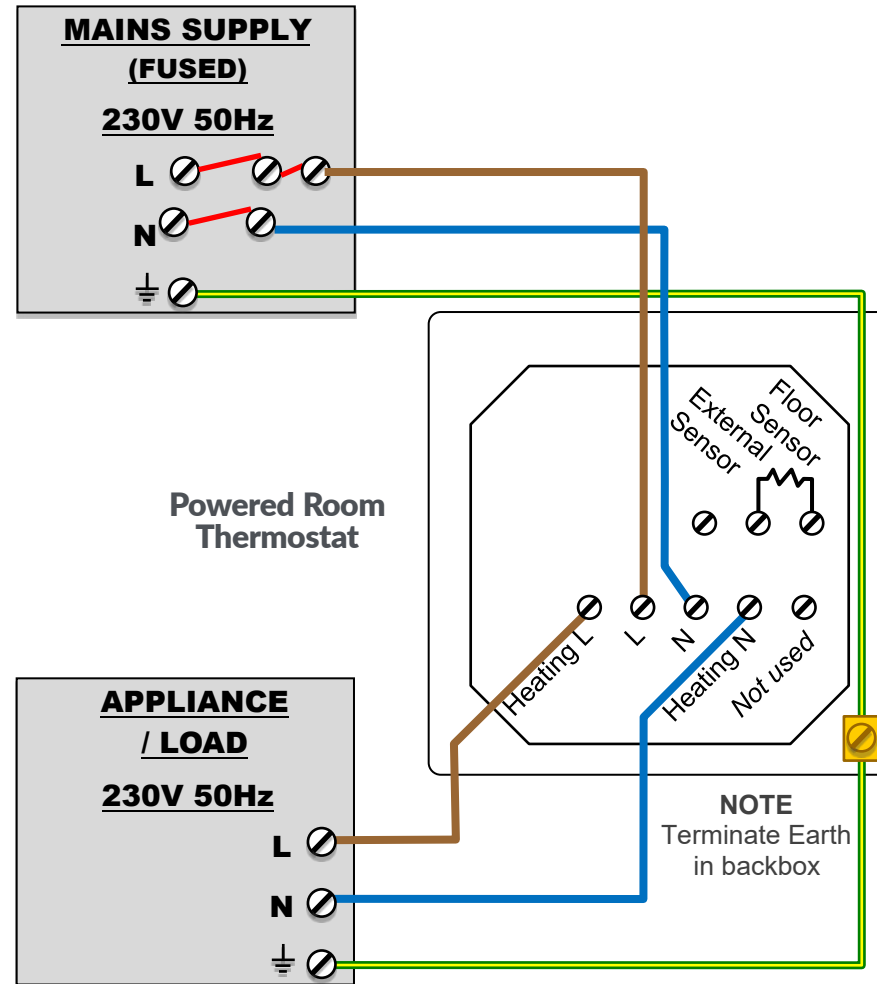

### Powered Room Thermostat

**NOTE** Insert link or floor probe into Floor Sensor terminals

**NOTE**  
Terminate Earth in backbox

**TIP:** Take a photo of the existing wiring before you start to help you remember.

For more wiring diagrams see:  
[www.geniushub.co.uk/wiring](http://www.geniushub.co.uk/wiring)

